


D39, 40, 41
 D29, 30, 31
 CAN BE
 SUBSTITUTED

CHANGE THESE
 IN 3070 DIODES
 TO IN4007

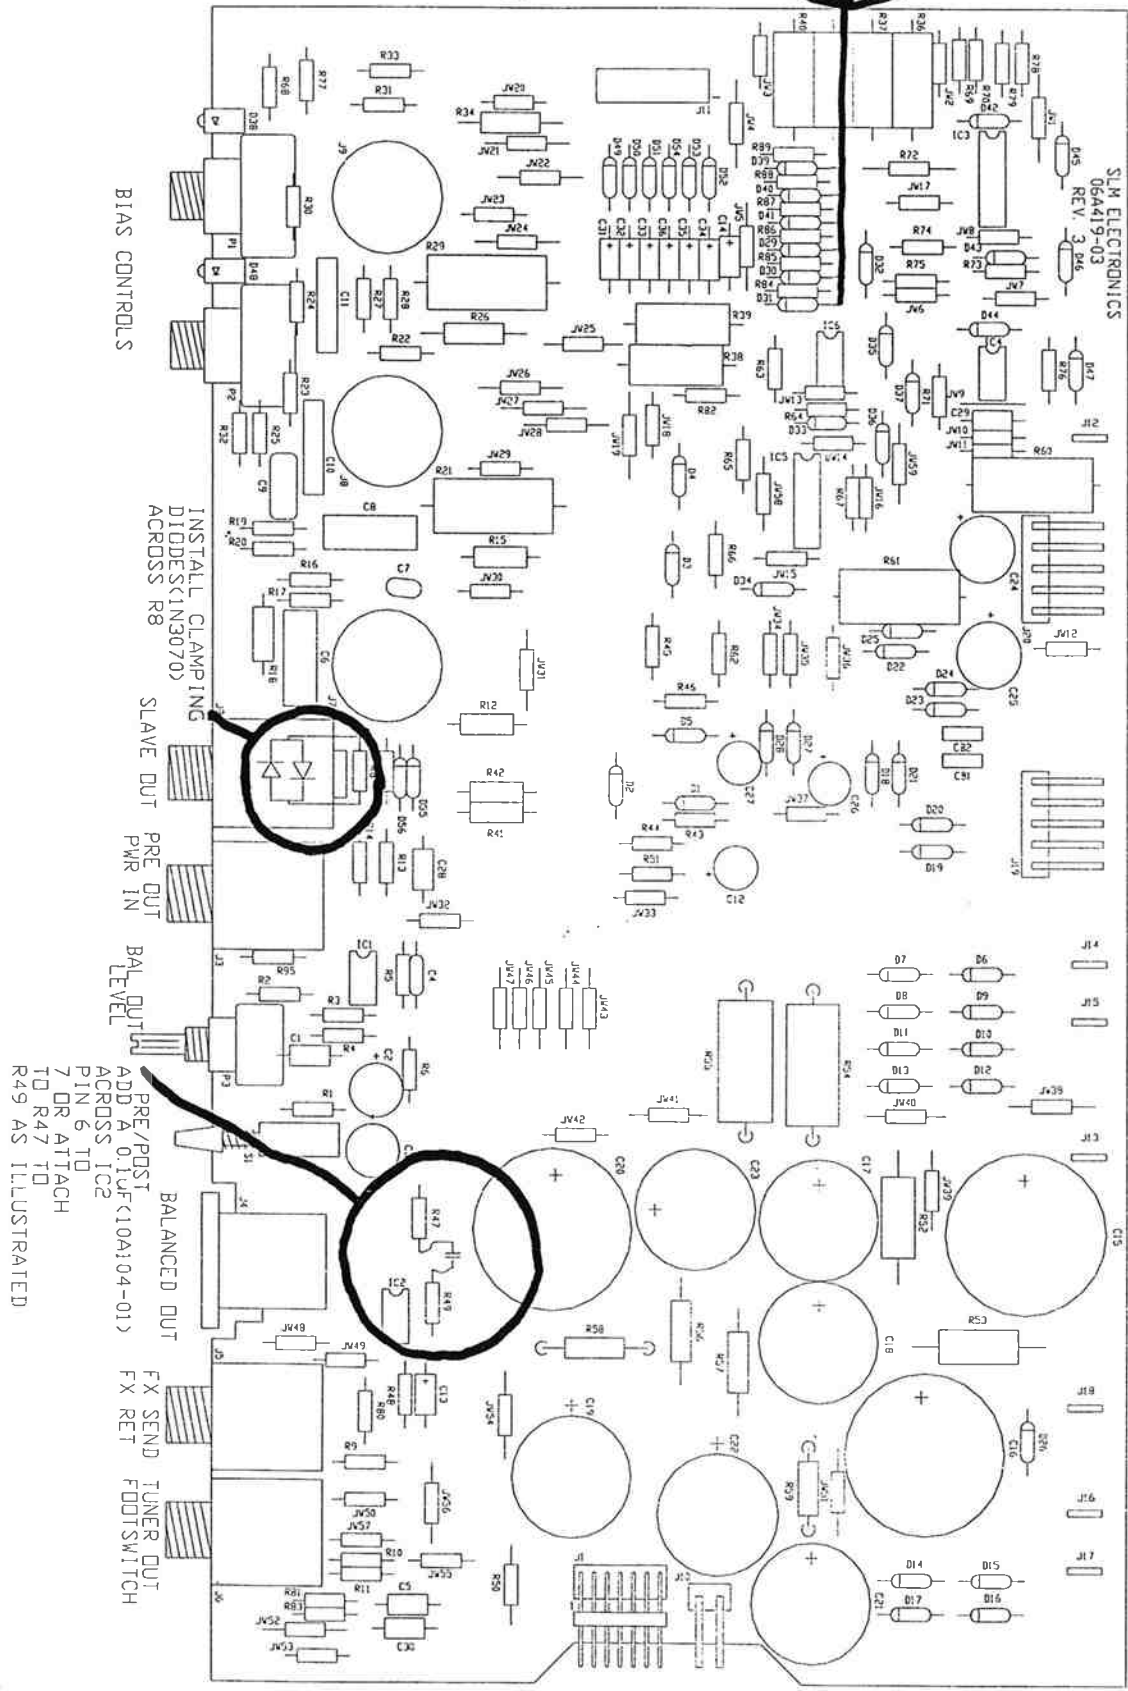

SILM ELECTRONICS
 06A419-03
 REV. 3 PM6

BIAS CONTROLS

INSTALL CLAMPING
 DIODES (IN3070)
 ACROSS R8

SLAVE OUT
 PRE OUT
 PWR IN

BAL. OUT
 LEVEL

PRE/POST
 ADD A 0.1uF (<10A> 04-01)
 PIN 6 TO
 7 OR ATTACH
 TO R47 TO
 R49 AS ILLUSTRATED



BALANCED OUT
 FX SEND
 FX RET

TUNER OUT
 FOOTSWITCH

TWORK REV. 3

R7
R8

SVT-CL AND
SVT-2PRD

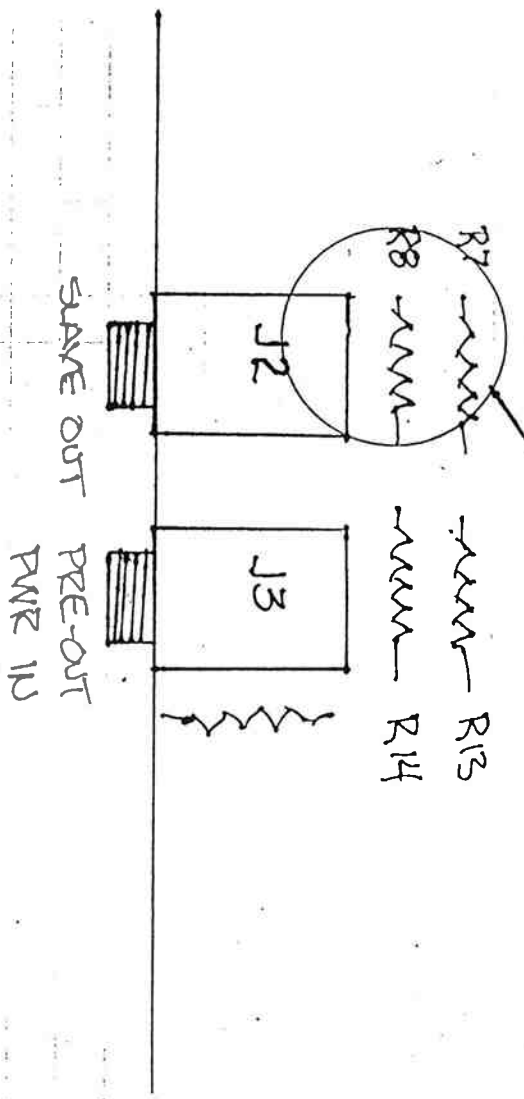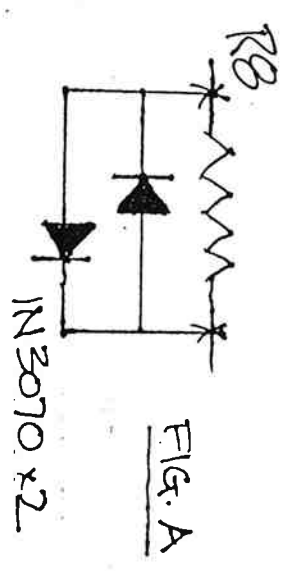

ADD (2) IN3070 (21A370-01) DIODES
BACKWARDS FROM EACH OTHER IN
PARALLEL WITH R8 (FIG. A)

* ALSO - ON P.C.B ASSY ~~07-319-03~~
CHANGE R1 TO 68K 1/4w (7C-683-01)